

C1 Cable (Generic / Canon)

Canon EOS: 1000D, 100D, 1100D, 300D, 350D, 400D, 450D, 500D, 550D, 600D, 600 Da, 650D, 60D, 700D, 760D, 70D, 80D

Canon REBEL: SL1, T1i, T2, T2i, T2ixt, T3, T3i, T4i, T5i, XT, XTi, XS, XSi, EKiss, Kiss F Digital, Kiss N, Kiss X2, Kiss X3, Kiss X4, Kiss X5, Kiss X50, Kiss X6, 350D, 1200D

Canon PowerShot: G10, G11, G12, G15, G16, G1 X, SX50 HS. FUJI: X-T1, X-E1, XE2, Finepix S1.

Contax: 645, N, N1, NX, N Digital

Hasselblad: H series

Pentax: K-3, K-5, K-5 II, K-5 IIs, K-7, K-m, K-10, K10D, K20D, K30, K50, K100D, K110D, K200, K200D, K-500, K2000, MZ-6, MZ,-L, ZX-L, x70, x90, *ist, *istD, *istDL, *istDL2, *istDs, *istDS2, 645D, 645Z.

Samsung: GX-1L, GX-1S, GX-10, GX-20, NX10, NX-11, NX100, NX5. SIGMA: SD1, SD9, SD10, SD14, SD15. HASSELBALD: H, H3D, H4D-200MS, H4D-31, H4D-40, H4D-50, H4D50MS, H4D-60

Sigma: SD1, SD9, SD10, SD14, SD15

Fuji: XT-2



C3 Cable (Canon)

Canon EOS: 10D, 1D, 1D C, 1D Mark II, 1Ds Mark II, 1D Mark III, 1Ds Mark III, 1D Mark IV, 1D X, 1Ds, 1Ds Mark II, 1Ds Mark III, 5D, 5D Mark II, 5D Mark III, 5D Mark IV, 5D SR, 6D, 7D, 7D Mark II, 1V/1VHS, EOS-3, D30, D60, D2000, 10D, 20D, 20Da, 30D, 40D, 50D.

Kodak: DSC-530



N1 Cable (Nikon, Fuji, Kodak)

Nikon: D1, D1H, D1X, D2, D2H, D2X, D2Xs, D2Hs, D200, D3, D3X, D3s, D4, D4s, D5, D200, D300, D300S, D500, D700, D800, D800 E, D810, F90x, F90, F100, F6, F5, N90s.

FUJI: S3 Pro, S5 Pro.

KODAK: DCS-14N



N2 Cable (Nikon)

Nikon: D70s, D80



N3 Cable (Nikon)

Nikon: D90, D600, D610, D750, D3100, D3200, D3300, D5000, D5100, D5200, D5300, D7000, D7100, D7200, P7800, Df



P1 Cable (Panasonic)

Panasonic: DMC: GX5, GX1S, GX1XS, GH3, GH4, GH7, GX8, G1, GH1, G1A, G1R, G2, G2A, G2R, G10, GH2, GH2S, G3, GF1, G5, G6, G10, FZ15, FZ20, FZ50 series, FZ100, FZ150, FZ30 series, FZ20S, FZ200, FZ1000, Ft 2, TS2A, TS2D, TS2S, TS2Y, LC-1, L-1, L-10

Leica: DigiLux 2, DigiLux 3, V-Lux 1, V-Lux 2, V-Lux 3, and V-Lux 4



P3 Cable (Olympus)

Olympus: E1, E3, E5, E10, E20, E30, E100, RS



P12 Cable (Olympus)

Olympus: OM-D series, PEN series, E-P1, E-P2, E-P3, EP5, E-PL2, E-PL3, E-PL5, E-PM1, EPM2, XZ-1, XZ-2, XZ-2, iHS, E30, E300, E400, E410, E420, E450, E510, E520, E600, E620, SP-510 UZ, SP-550 UZ, SP-560 UZ, SP-570 UZ, SP-590 UZ, Evolt E-410, Evolt E-510



S1 Cable (Sony, Minolta)

Sony: A100, A100k, A200, A300, A350, A400, A450, A500, A550, A550V, A560, A580, A700, A850, A900, SLT-A33, A35, A37, A55, A65, A65V, A57, A77, A99, Minolta: Dimage: A1, A2, 3, 4, 5, 7, 7I, 7HI, 9, A200 Maxxuum: 3, 4, 5D, 5xi, 7, 7D, 7xi, 9xi, 9, 500si, 505si, 600si, 700si, 800si, 807si, 5000, 7000, 9000 Dynax: 3, 4, 500si, 505si, 5D, 5000, 7, 7000, 7D, 9, 9000

Hasselbald: HV



S2 Cable (Sony)

Sony: A58, NEX-3N, A7, A7R, A7S, A77II, A7r II, A3000, A6000, A6300, HX300, HX50V, RX10, RX100II, RX100III, 5000L

F1 Cable (Fuji)

Fuji: Finepix X-A1, X-M1, X-T1, XQ1, S1 , X-E2S